



REPRINT Use this function to reprint memory.	the last transaction or any transaction stored in the terminal's
IDLE PROMPT	Touch Credit
TIPS PENDING MORE SALES	Touch More
REPRINT VIEW PRINT RPRT RPRT	Touch Reprint
ENTER INVOICE #	Key invoice number and press Enter or press Enter to reprint last receipt
PRINT CUST RECEIPT YES NO	Touch Yes to print customer receipt.
REPRINT VIEW PRINT RPRT RPRT	Press Clear to return to idle prompt

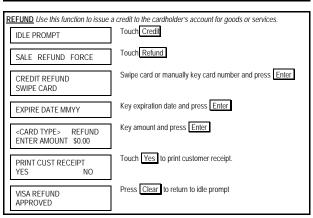


DEBIT SALE (with Cash Back) Use this	function to authorize and capture transactions for settlement.
IDLE PROMPT	Touch Debit
SALE REFUND	Touch Sale
DEBIT SALE SWIPE CARD	Swipe card on terminal or pin pad Debit card can't be manually keyed
LAST FOUR ACCOUNT NUMBERS MATCH? #### YES NO	Verify last 4 digits of account number and Touch Yes
EDS DEBIT SALE ENTER AMOUNT \$0.00	Key amount and press Enter
SALE AMT:\$0.00 CASH BACK AMT \$0.00	Key cash back amount and press Enter
PLEASE ENTER PIN	Instruct customer to enter PIN and press Enter . Do not ask customer for the PIN
DIALING	Terminal communicates with the host for approval
PRINT CUST RECEIPT? YES NO	Touch Yes to print customer receipt
DEBIT SALE APPROVED 000000	Press Clear to return to idle prompt


TIP ADJUSTMENT Use this function	to add the tip amount to a transaction that is in the current batch.
IDLE PROMPT	Touch Credit
TIPS PENDING MORE SALES	Touch Tips
ENTER INVOICE #	Key invoice number and press Enter
VS SALE 00000 TIP \$0.00 AMOUNT \$1.00 XXXXXXXXXXXXXXXXX <prev edit="" next=""></prev>	Touch Edit
NEW TIP \$0.00	Key tip amount press Enter
VS SALE 00000 TIP \$0.10 AMOUNT \$1.10 XXXXXXXXXXXXXXXX <prev edit="" next=""></prev>	Press Clear to return to idle prompt


BALANCE INQUIRY Use this function	n to perform a Balance Inquiry.
IDLE PROMPT	Touch Credit
AUTH CLOSE INQUIRY	Touch Inquiry
CREDIT INQUIRY SWIPE CARD	Swipe card or manually key card number and press Enter
EXPIRE DATE MMYY	Key expiration date and press Enter
DIALING	Terminal communicates with the host
APPROVED OK 0000	Press Clear to return to idle prompt

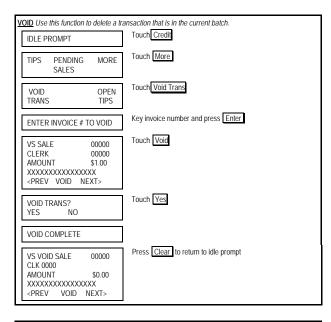

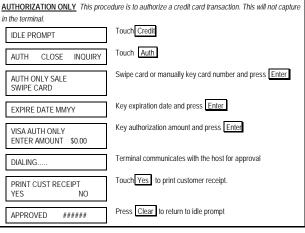

^{© 2009} First Data. All rights reserved. All trademarks and service marks referenced in this material are the property of their respective owners.

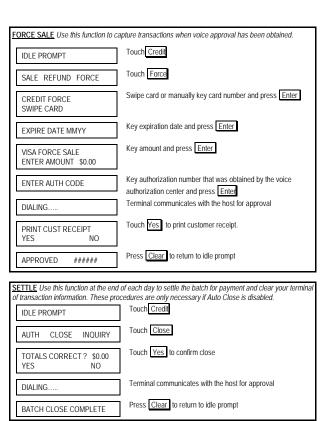

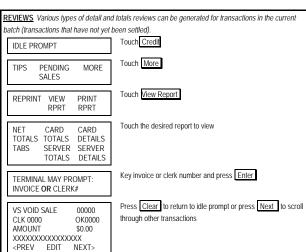

REPORTS Various types of detail and totals reports can be generated for transactions in the current batch (transactions that have not yet been settled).

IDLE PROMPT	Touch Credit
TIPS PENDING MORE SALES	Touch More
REPRINT VIEW PRINT RPRT RPRT	Touch Print Report
NET CARD CARD TOTALS TOTALS DETAILS TABS SERVER SERVER TOTALS DETAILS	Touch the desired report to view
PRINTING REPORT	Press Clear to return to idle prompt

IDLE PROMPT	Touch Credit
SALE REFUND FORCE	Touch Sale
CREDIT SALE SWIPE CARD	Swipe card or manually key card number and press Enter
EXPIRE DATE MMYY	Key expiration date and press Enter
CARD PRESENT? YES NO	Touch Yes if the card is present or Touch No if the card not present
VISA SALE ENTER AMOUNT \$0.00	Key amount and press Enter
ADDRESS	Key the first 5 digits of the customer's address and press Enter
ZIP CODE	Key customer's zip code and press Enter
DIALING	Terminal communicates with the host for approval
COLLECT \$0.00 ACCEPT PARTIAL AMOUNT YES/NO	Touch the desired option
PRINT CUST RECEIPT YES NO	Touch Yes to print customer receipt
APPROVED OK 0000-00 AVS = XXX	Press Clear to return to idle prompt

FIRST DATA
FD 400
QUICK REFERENCE GUIDE

Retail (750FD400)